COOKTOP AND CONTROL PANEL PARTS

For Model: FGP310YW2, FGP310YL2
(White) (Almond)

ROPER™
Home Appliances

30" GAS
FREESTANDING
RANGE
PILOT
IGNITION
STANDARD
CLEAN OVEN

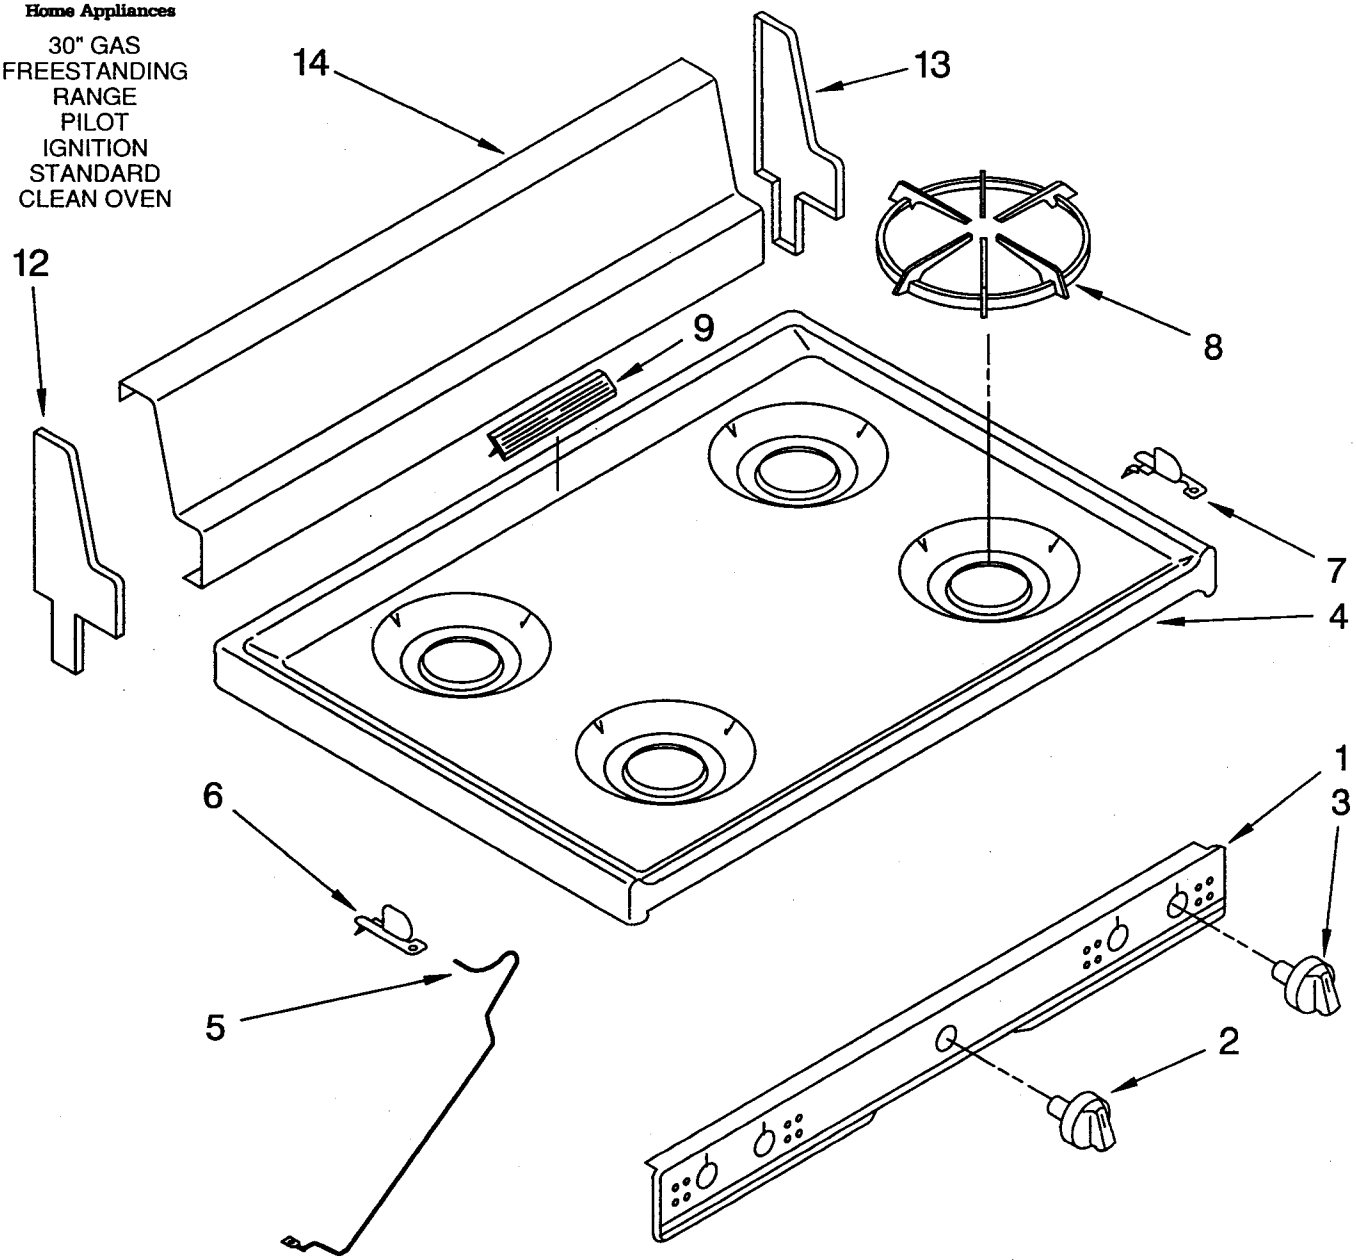

2-93

1	4371491	Panel, Control
2	4372115	Knob, Thermostat
3	4371492	Knob, Burner (4)
4		Top, Main
	4371124	White
	4371131	Almond
5	4371039	Rod,Support
6	816586	Bracket,Top LH
7	816721	Bracket,Top RH
8	4372094	Grate,Burner (4)
9	4371079	Cover,Vent
12	4371108	Endcap LH
13	4371109	Endcap RH
14	4371421	Panel,Backguard

LITERATURE PARTS

LIT4372116	List, Repair Parts
LIT4371003	Installation, Instructions
LIT816990	Guide, Use & Care

MANIFOLD PARTS

For Model: FGP310YW2, FGP310YL2
(White) (Almond)

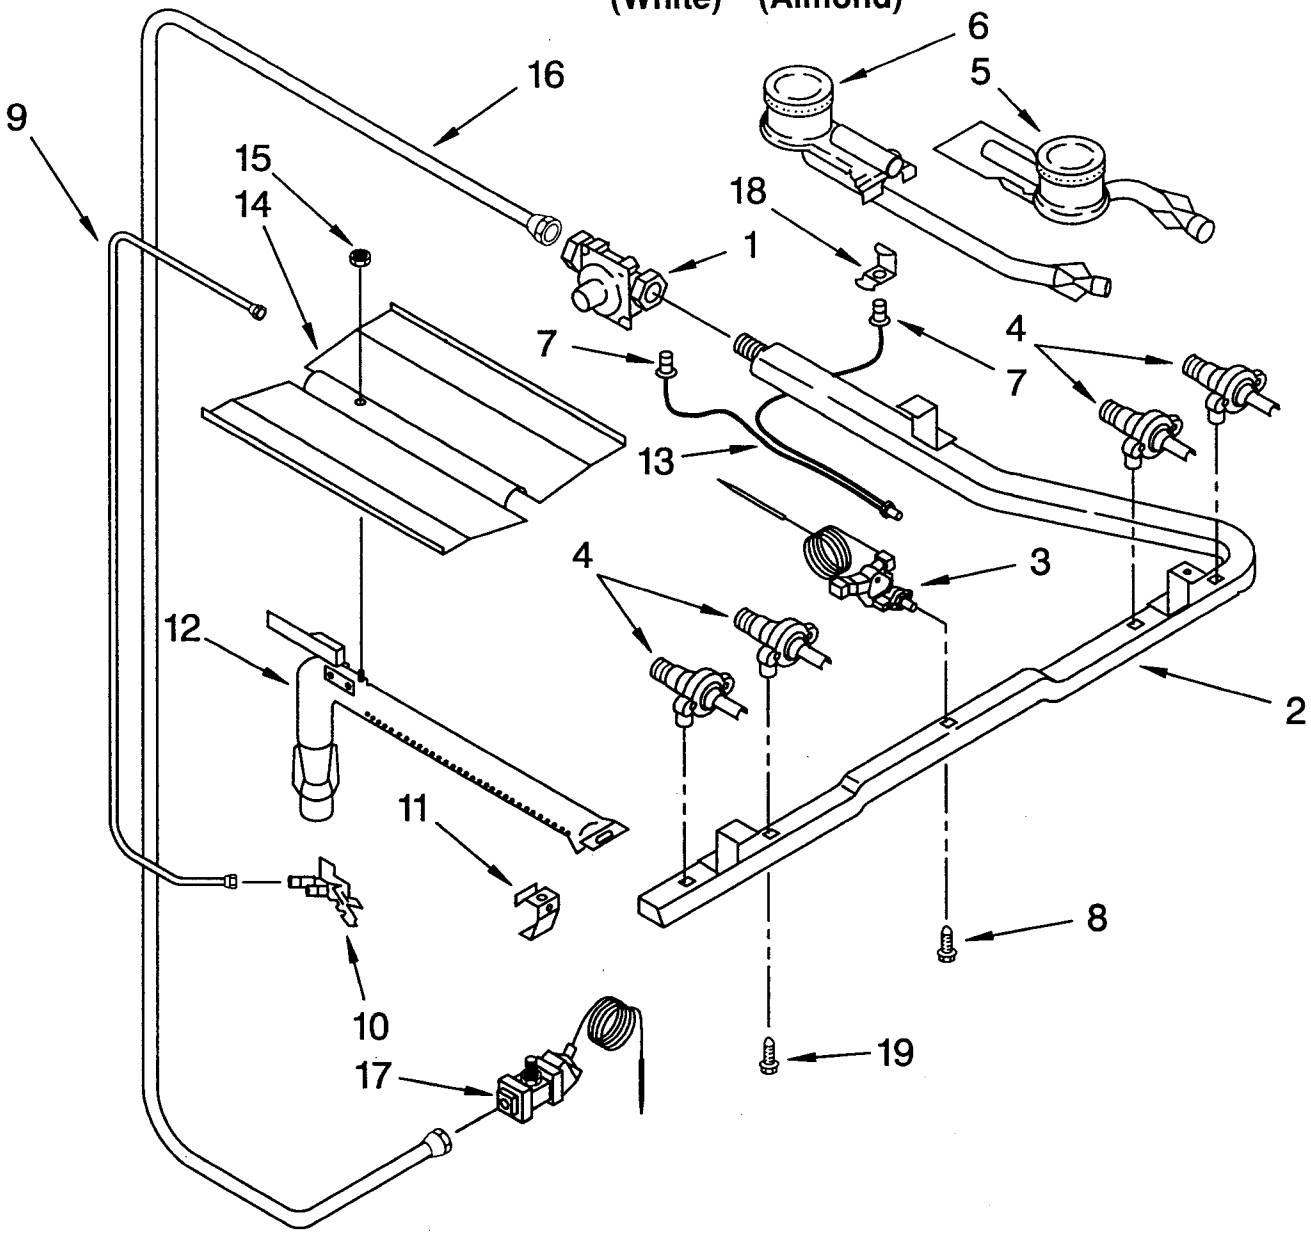

1	4371093	Regulator,Pressure
2	4371094	Pipe,Manifold
3	4372114	Thermostat
4	4371297	Valve,2 pos(4)
5	4371480	Burner,Front(2)
6	4371481	Burner,Front(2)
7	4371075	Cap, Pilot (2)
8	4371095	Screw, Thermostat
9	4371103	Tubing,Thermostat
10	4371098	Pilot, Oven
11	4371069	Bracket,Burner
12	4371070	Burner,Oven
13	4371104	Tubing, Pilot
14	4371280	Baffle,Oven Burner
15	816642	Nut,Baffle
16	4371105	Tubing, Valve
17	4371106	Valve, Safety
18	4371101	Shield, Pilot
19	4371027	Screw, Valve Mtg.

DOOR AND BROILER PARTS

For Model: FGP310YW2, FGP310YL2
(White) (Almond)

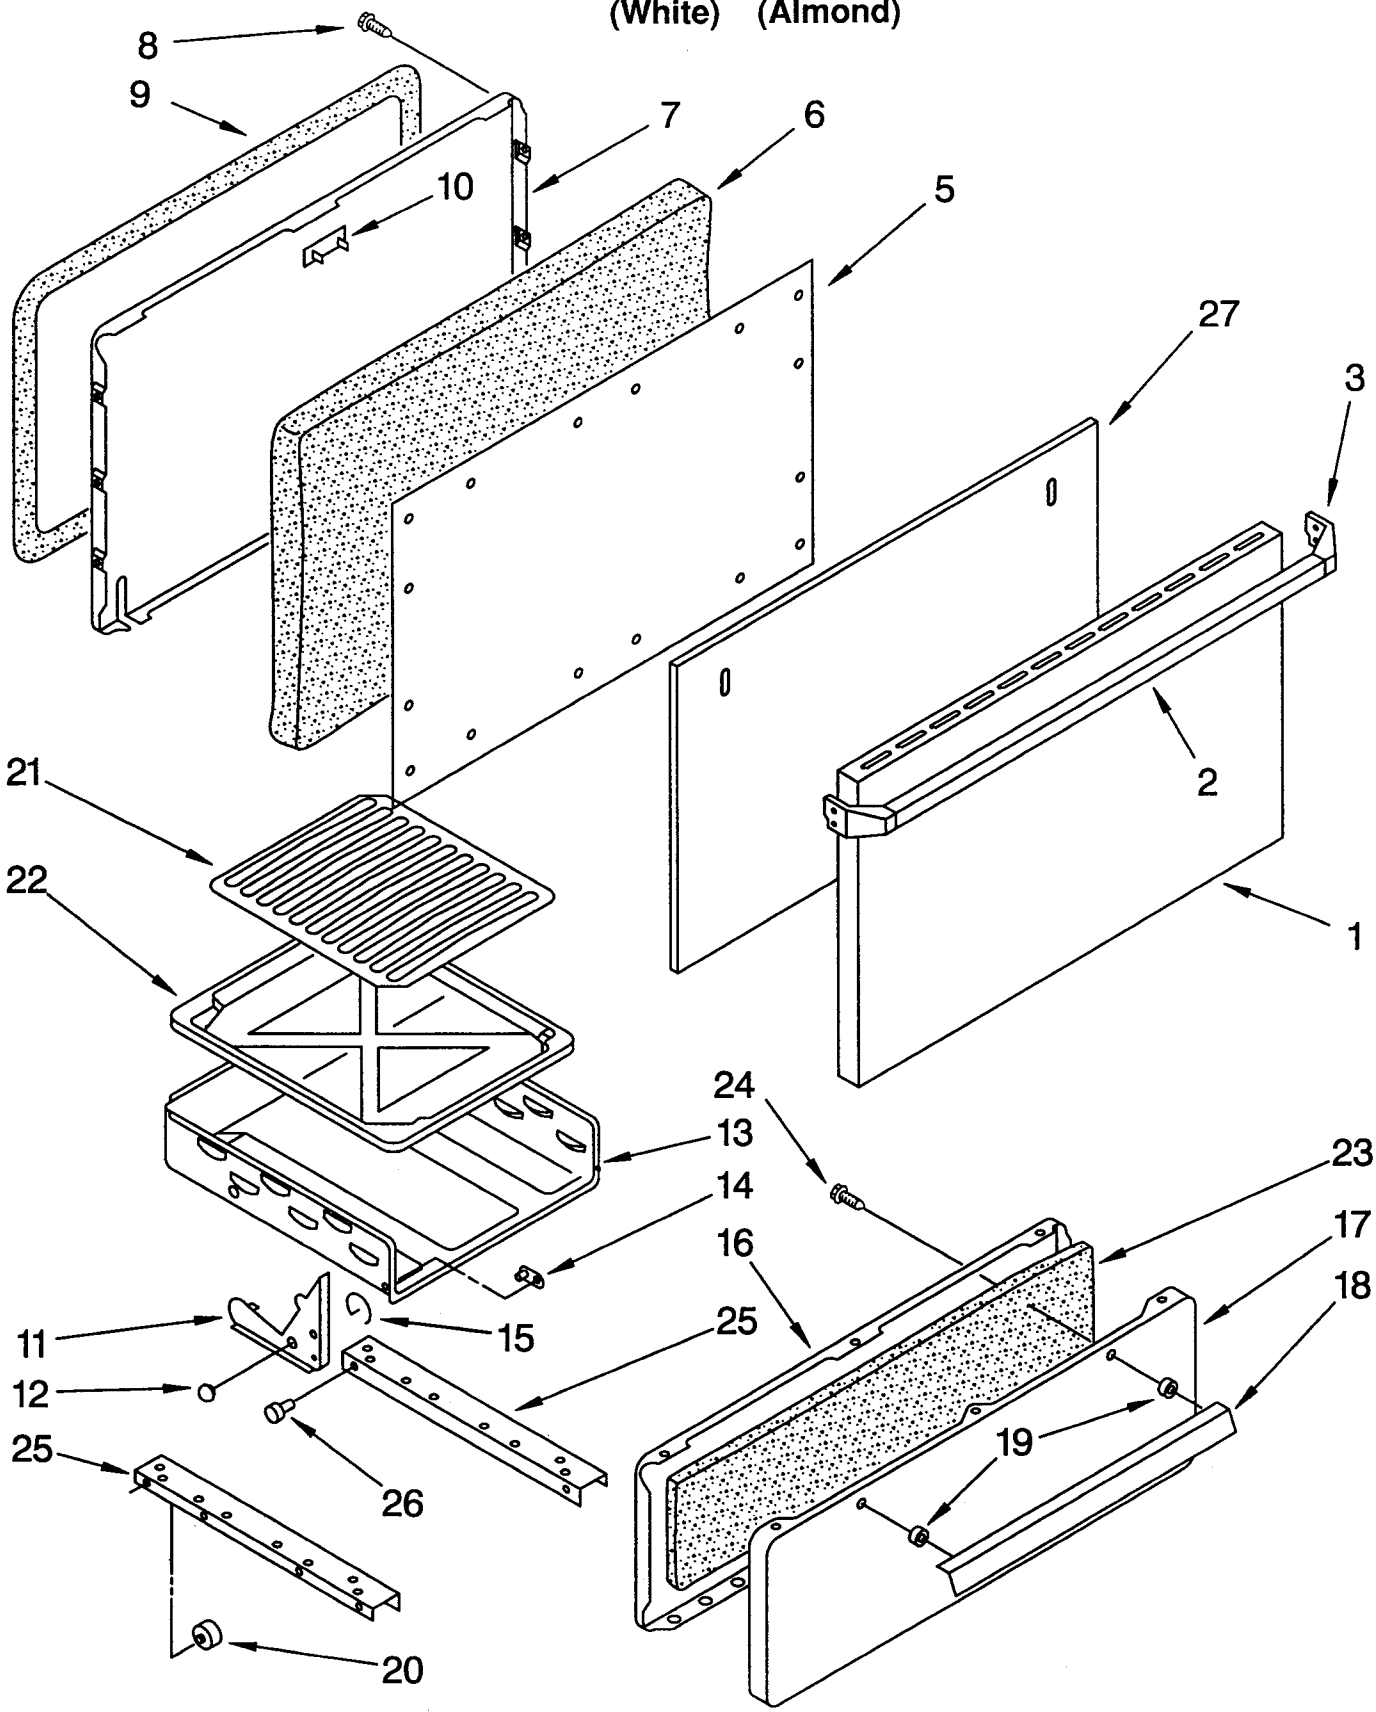

1		Panel, Door
	4371486	White
	4371132	Almond
2	4371086	Handle, Door
3	4371074	Endcap(2)
5	4371046	Shield,Heat
6	4371126	Insulation
7	4371044	Liner,Oven Door
8	4371100	Screw,Handle(2)
9	4371128	Seal,Door
10	4371125	Cover,Door
11	4371113	Bracket,Hinge LH
	4371114	Bracket,Hinge RH
12	4371117	Fastener,Push Nut
13	4371116	Body,Broiler
14	4371121	Pin,Hinge
15	4371122	Spring,Broiler LH
	4371123	Spring,Broiler RH
16	4371120	Liner,Broiler Door
17		Panel,Drawer
18	4371118	Handle,Drawer
	816754	White
	4371130	Almond
19	816713	Fastener,Spacer
20	4371084	Glide,Drawer
21	816626	Grid,Broiler
22	816644	Pan,Broiler
23	4371119	Insulation
24	4371063	Screw (2)
25	4371077	Track, Upper (2)
26	4371115	Button,Glide
27	4371487	Plate, Door Weight

OVEN PARTS

For Model: FGP310YW2, FGP310YL2
(White) (Almond)

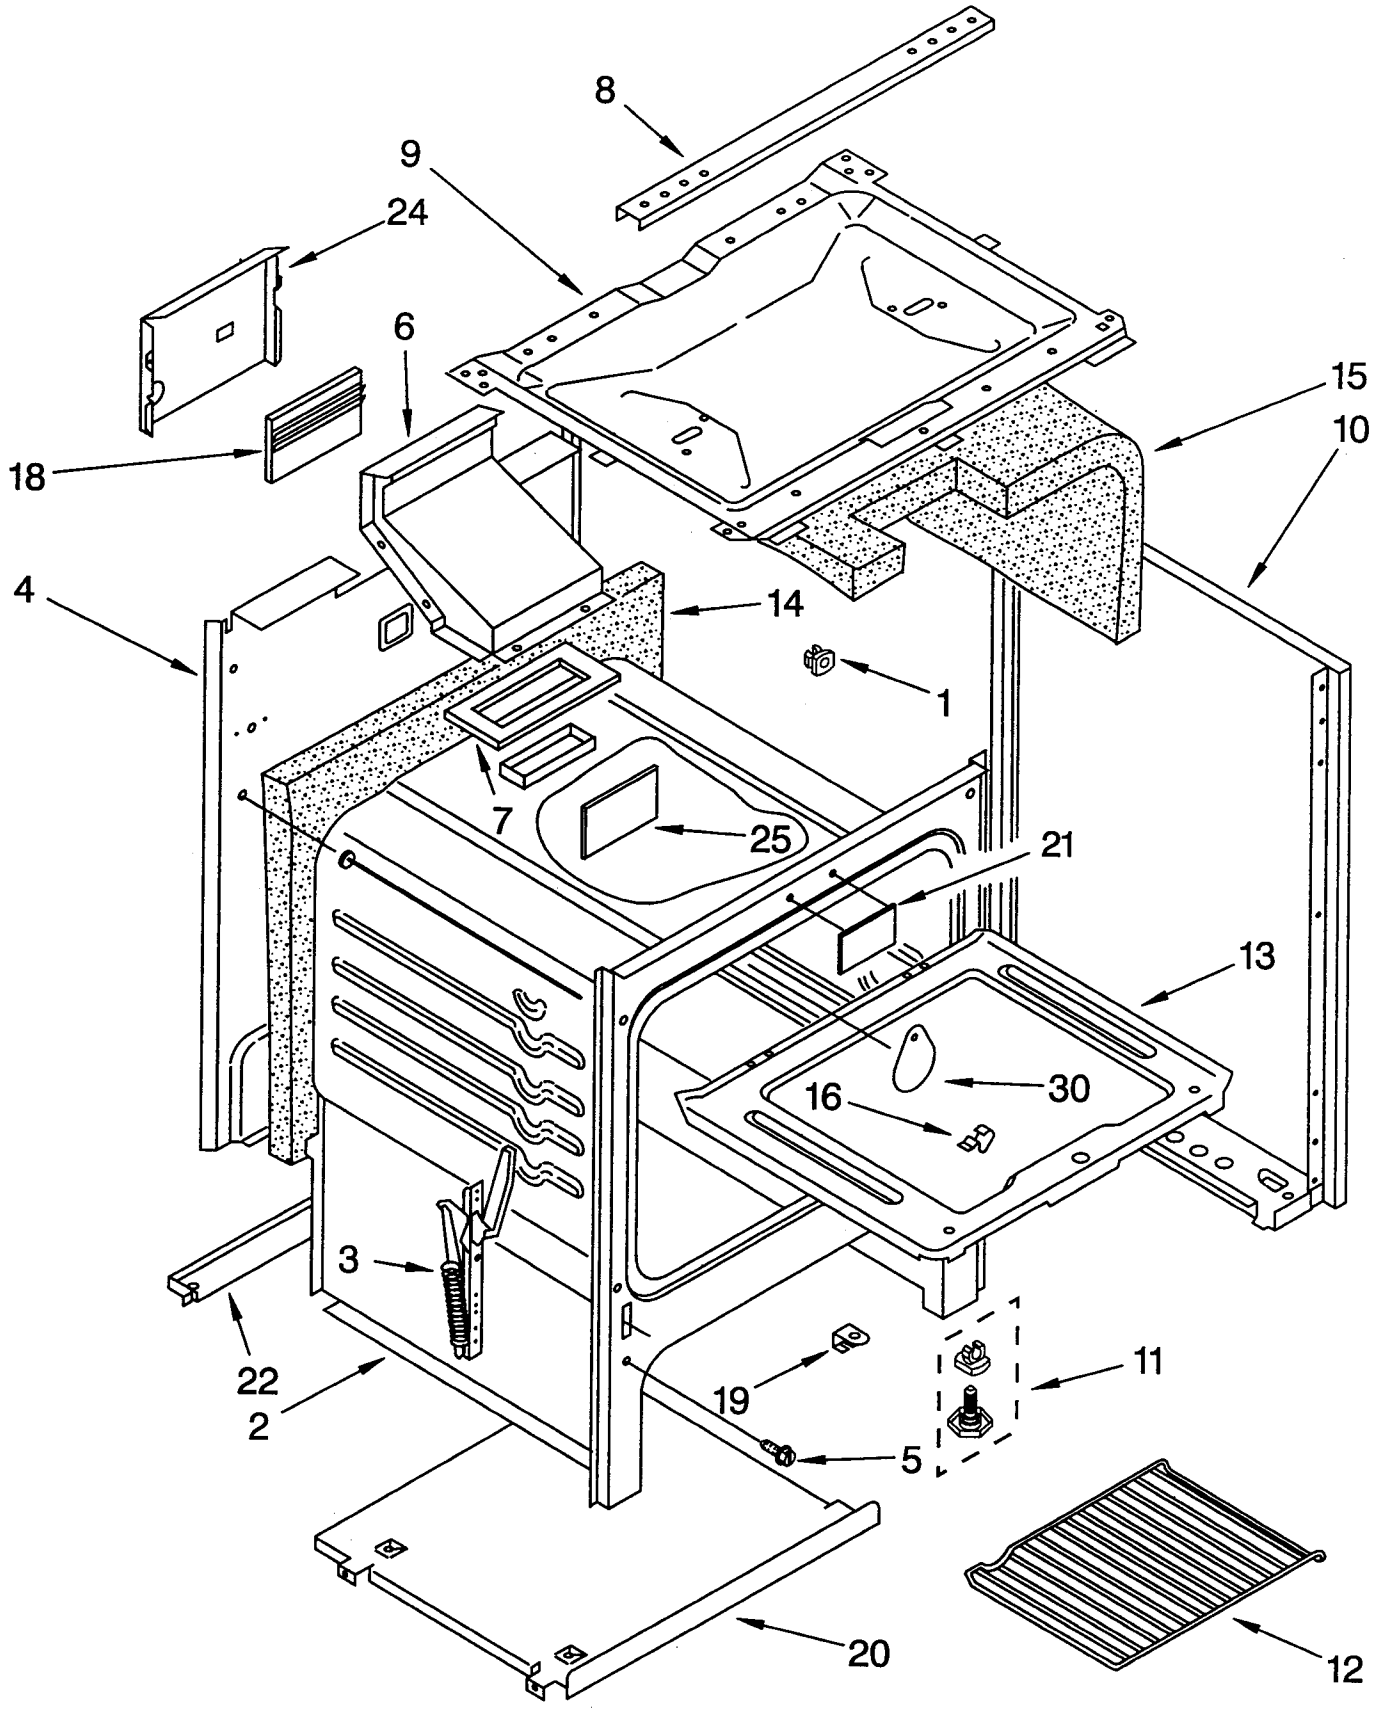

1	816669	Spacer,B/S(8)
2		Liner,Oven (Not a Serviceable Part)
3	4371087	Channel,Door Hinge
4	816581	Back,Main
5	816651	Screw,Oven Bottom
6	4371083	Flue
7	816620	Gasket,Flue
8	4371076	Support,Burner
9	4371073	Burner,Box
10		Panel B/S
	816708	White RH
	816709	White LH
	816672	Almond RH
	816695	Almond LH
11	4371909	Screw, Leveler (4)
12	4371483	Rack,Oven (2)
13	4371018	Bottom,Oven
14	4371092	Insulation,Back
15	4371091	Insulation,Wrap
16	4371482	Clip,Thermo Bulb
18	4371082	Cover,Flue
19	816670	Support,Oven
20	4371068	Base,Broiler
21	4371081	Cover,Front
22	816585	Brackets,Anti Tip
24	4371102	Shield,Flue
25	4371080	Cover,Plate
30	4371099	Cover, Oven Light